

ALPHABETICAL INDEX

	Page		Page
FRONT SUSPENSION	2-0	LIGHTING SYSTEM	8-75
CROSSMEMBER	2-8	DIMMER AND PASSING LIGHT	
FRONT AXLE HUB	2-6	SWITCHES	8-80
STABILIZER AND STRUT BAR	2-15	HEADLIGHTS	8-76
SUSPENSION	2-9	HEADLIGHT SWITCH AND DIMMER	
		CONTROL	8-80
REAR AXLE	3-0	METERS, GAUGES AND INDICATORS	8-59
DIFFERENTIAL	3-9	GAUGES	8-65
REAR AXLE ASSEMBLY	3-3	INDICATOR LIGHTS	8-70
REAR AXLE SHAFT	3-4	INSTRUMENT CLUSTER	8-59
		SPEEDOMETER AND CABLE	8-63
BRAKES—PARKING AND SERVICE	5-0	TACHOMETER	8-64
BLEND PROPORTIONING VALVE	5-14	RADIO	8-93
BRAKE PEDAL	5-6	ANTENNA	8-96
BRAKE TUBES	5-13	RADIO	8-94
DUO-SERVO BRAKES	5-22	SPEAKER	8-95
MASTER CYLINDER	5-8	SEAT BELT SYSTEM	8-73
PARKING BRAKES	5-26	BELT SWITCH	8-74
POWER BRAKE	5-11	BUZZER AND WARNING LIGHT	8-74
SLIDING CALIPER TYPE DISC BRAKES	5-17	SEAT BELT WARNING SYSTEM	8-73
BRAKE DISC	5-21	TIMER	8-74
CALIPER ASSEMBLY	5-20	SPARK PLUG	8-35
DISC BRAKE PAD	5-18	STARTER MOTOR — DIRECT DRIVE	
		TYPE	8-18
CLUTCH	6-0	STARTER MOTOR — REDUCTION DRIVE	
CLUTCH	6-4	TYPE	8-26
CLUTCH CONTROL	6-2	TURN SIGNAL AND HAZARD WARNING	
CLUTCH CABLE	6-3	LIGHTS	8-81
CLUTCH PEDAL	6-3	COLUMN SWITCH	8-82
		ESS RELAY	8-83
COOLING	7-0	RELAY UNITS	8-83
FAN AND DRIVE BELT	7-6	WINDSHIELD WIPER AND WASHER	8-85
FAN CLUTCH	7-7	WINDSHIELD WASHER	8-91
RADIATOR	7-3	WIPER LINKAGE	8-91
RESERVE TANK	7-6	WIPER MOTOR	8-89
THERMOSTAT	7-8	WIPER SWITCH	8-90
WATER PUMP	7-7	WIRING HARNESS	8-46
WATER TEMPERATURE GAUGE UNIT	7-9	FUSE BLOCK	8-54
		FUSIBLE LINK	8-55
ELECTRICAL	8-0	IGNITION SWITCH	8-58
ALTERNATOR AND ELECTRONIC VOLT-		WIRING HARNESS	8-56
AGE REGULATOR	8-36	ENGINE	9-0
BATTERY	8-44	U-AND W-ENGINE	9-7
ELECTRONIC IGNITION SYSTEM (EIS)	8-30	CAM SHAFT	9-7
DISTRIBUTOR—Contact pointless type		CRANKSHAFT	9-31
with electronic ignition control unit	8-30	CYLINDER BLOCK	9-33
HIGH TENSION CABLE	8-35	CYLINDER HEAD	9-11
HORN	8-92	FLYWHEEL	9-31
IGNITION COIL	8-35		

	Page		Page
JET VALVE	9-18	AUTOMATIC TRANSMISSION	
OIL SEALS	9-32	(TORQUEFLITE) (MA-904A)	21-27
PISTON AND CONNECTING ROD	9-27	BAND	21-54
ROCKER ARMS AND SHAFTS	9-10	CONTROL ROD	21-54
SILENT SHAFT	9-25	EXTENSION HOUSING BUSHING AND	
TIMING CHAIN TRAIN	9-21	OUTPUT SHAFT BEARING	21-58
VALVES AND VALVE SPRINGS	9-14	EXTENSION HOUSING YOKE SEAL	21-58
ENGINE MOUNTING	9-4	FRONT CLUTCH	21-51
OIL FILTER	9-37	GEARSHIFT LINKAGE	21-52
OIL PRESSURE SWITCH AND GAUGE UNIT		GOVERNOR AND PARKING GEAR	21-59
OIL PRESSURE GAUGE UNIT	9-37	INHIBITOR SWITCH	21-57
OIL PRESSURE SWITCH	9-38	KICKDOWN SERVO AND BAND	21-79
OIL PUMP	9-35	LOW-REVERSE SERVO AND BAND	21-79
EXHAUST SYSTEM	11-0	OIL PUMP AND REACTION SHAFT	
BODY AND FRAME ALIGNMENT	13-0	SUPPORT	21-70
FRAME	13-2	OVERRUNNING CLUTCH	21-77
CAB	13-4	PARKING LOCK COMPONENTS	21-61
REAR BODY	13-6	PLANETARY GEAR TRAIN	21-76
FUEL SYSTEM	14-0	PUMP OIL SEAL	21-67
CARBURETOR	14-9	REAR CLUTCH	21-74
ENGINE CONTROL	14-19	SPEEDOMETER PINION GEAR	21-56
FUEL FILLER CAP	14-6	THROTTLE ROD	21-54
FUEL FILTER	14-6	TRANSMISSION AND CONVERTER	21-66
FUEL PUMP	14-8	VALVE BODY AND ACCUMULATOR	
FUEL TANK	14-4	PISTON	21-61
VAPOR SEPARATOR	14-7	MANUAL TRANSMISSION—FOUR SPEED	
PROPELLER SHAFT AND UNIVERSAL		(KM130)	21-4
JOINTS	16-0	MANUAL TRANSMISSION—FIVE SPEED	
PROPELLER SHAFT	16-3	(KM132)	21-15
REAR SUSPENSION	17-0	WHEEL AND TIRES	22-0
LEAF SPRING	17-3	DISC	22-2
SHOCK ABSORBER	17-3	WHEEL	22-2
STEERING	19-0	BODY AND SHEET METAL	23-0
MANUAL STEERING	19-1	BODY PANELING	23-3
STEERING GEAR BOX	19-9	DOORS	23-19
STEERING LINKAGE	19-14	DOOR ASSEMBLY AND DOOR HINGES	23-20
STEERING WHEEL AND SHAFT	19-4	DOOR GLASS AND REGULATOR	23-22
POWER STEERING	19-19	DOOR HANDLE AND DOOR LATCH	23-24
OIL PUMP	19-43	DOOR OPENING TRIM	23-26
OIL PUMP (RESERVOIR TANK IN		WEATHERSTRIP	23-25
SEPARATE TYPE)	19-44	EXTERIOR ATTACHMENTS	23-14
OIL PUMP (RESERVOIR TANK IN		BUMPER	23-15
UNIT TYPE)	19-52	GRILLE	23-15
POWER STEERING GEAR BOX	19-31	MOULDING	23-14
POWER STEERING SHAFT	19-28	SPARE TIRE CARRIER	23-16
TRANSMISSION—MANUAL AND		FENDERS AND FENDER LINER	23-13
AUTOMATIC	21-0	HEAD LINING AND TRIM BOARD	23-33
		HEAD LINING	23-33
		HOOD	23-10
		INSTRUMENT PANEL	23-27
		GLOVE BOX	23-28
		CLUSTER PANEL	23-29

	Page		Page
INSTRUMENT PANEL PADDING	23-30	COASTING AIR VALVE (CAV)	
MOUNTING	23-6	SYSTEM	25-12
CABIN MOUNTING	23-6	DASH POT	25-13
REAR BODY MOUNTING	23-8	ELECTRONIC IGNITION SYSTEM	25-11
REAR GATE	23-26	EVAPORATION CONTROL SYSTEM	25-2
REAR VIEW MIRROR, SUN VISOR, AND		CANISTER	25-5
HAND RAIL	23-33	FUEL CHECK VALVE	25-5
SEAT	23-34	PURGE CONTROL VALVE	25-6
SEAT BELT	23-35	SEPARATOR TANK	25-4
WINDSHIELD GLASS	23-17	TWO-WAY VALVE	25-4
WINDSHIELD GLASS	23-17	EXHAUST GAS RECIRCULATION (EGR)	
REAR WINDOW GLASS	23-19	SYSTEM—TRUCKS FOR U.S.A. ONLY	25-16
HEATERS AND AIR-CONDITIONING	24-0	EGR CONTROL VALVES	25-16
HEATER AND VENTILATOR	24-2	THERMO VALVE	25-17
DEFROSTER NOZZLE	24-6	EXHAUST GAS RECIRCULATION (EGR)	
HEATER ASSEMBLY	24-4	SYSTEM—WITH CV TYPE EGR	
HEATER CONTROL ASSEMBLY	24-5	CONTROL VALVE (TRUCKS FOR CANADA	
HEATER FAN SWITCH	24-7	ONLY)	25-18
HEATER MOTOR	24-6	EGR CONTROL VALVE	25-19
SIDE VENTILATOR DUCT	24-7	THERMO VALVE	25-19
EMISSION CONTROL SYSTEMS	25-0	HEATED AIR INTAKE SYSTEM	25-14
CATALYTIC CONVERTER — TRUCKS		JET AIR SYSTEM—TRUCKS FOR U.S.A.	
FOR U.S.A. ONLY	25-10	ONLY	25-6
CRANKCASE EMISSION CONTROL		SECONDARY AIR SUPPLY SYSTEM	
SYSTEM	25-20	— TRUCKS FOR CALIFORNIA AND	
DECELERATION DEVICE	25-12	TRUCKS WITH W-ENGINE FOR	
AIR SWITCHING VALVE (ASV)		49 STATES	25-11
SYSTEM	25-13		

SYSTEM	
VIB SWITCHING VALVE (V2A)	32-13
DECELERATION DEVICE	32-14
SYSTEM	
EXHAUST EMISSION CONTROL	32-15
EXHAUST VALVE	32-16
EXHAUST COLLECTOR - TRUCKS	32-17
EMISSION CONTROL SYSTEMS	32-18
TRUCK AIR INTAKE	32-19
TRUCK MOTOR	32-20
TRUCK FUEL SWITCH	32-21
TRUCK CONTROL ASSEMBLY	32-22
TRUCK ASSEMBLY	32-23
TRUCK MOTOR	32-24
TRUCK AIR INTAKE	32-25
TRUCKS AND VIB CONDITIONING	32-26
TRUCK MOTOR	32-27
TRUCK MOTOR	32-28
TRUCK MOTOR	32-29
TRUCK MOTOR	32-30
TRUCK MOTOR	32-31
TRUCK MOTOR	32-32
TRUCK MOTOR	32-33
TRUCK MOTOR	32-34
TRUCK MOTOR	32-35
TRUCK MOTOR	32-36
TRUCK MOTOR	32-37
TRUCK MOTOR	32-38
TRUCK MOTOR	32-39
TRUCK MOTOR	32-40
TRUCK MOTOR	32-41
TRUCK MOTOR	32-42
TRUCK MOTOR	32-43
TRUCK MOTOR	32-44
TRUCK MOTOR	32-45
TRUCK MOTOR	32-46
TRUCK MOTOR	32-47
TRUCK MOTOR	32-48
TRUCK MOTOR	32-49
TRUCK MOTOR	32-50
TRUCK MOTOR	32-51
TRUCK MOTOR	32-52
TRUCK MOTOR	32-53
TRUCK MOTOR	32-54
TRUCK MOTOR	32-55
TRUCK MOTOR	32-56
TRUCK MOTOR	32-57
TRUCK MOTOR	32-58
TRUCK MOTOR	32-59
TRUCK MOTOR	32-60
TRUCK MOTOR	32-61
TRUCK MOTOR	32-62
TRUCK MOTOR	32-63
TRUCK MOTOR	32-64
TRUCK MOTOR	32-65
TRUCK MOTOR	32-66
TRUCK MOTOR	32-67
TRUCK MOTOR	32-68
TRUCK MOTOR	32-69
TRUCK MOTOR	32-70
TRUCK MOTOR	32-71
TRUCK MOTOR	32-72
TRUCK MOTOR	32-73
TRUCK MOTOR	32-74
TRUCK MOTOR	32-75
TRUCK MOTOR	32-76
TRUCK MOTOR	32-77
TRUCK MOTOR	32-78
TRUCK MOTOR	32-79
TRUCK MOTOR	32-80
TRUCK MOTOR	32-81
TRUCK MOTOR	32-82
TRUCK MOTOR	32-83
TRUCK MOTOR	32-84
TRUCK MOTOR	32-85
TRUCK MOTOR	32-86
TRUCK MOTOR	32-87
TRUCK MOTOR	32-88
TRUCK MOTOR	32-89
TRUCK MOTOR	32-90
TRUCK MOTOR	32-91
TRUCK MOTOR	32-92
TRUCK MOTOR	32-93
TRUCK MOTOR	32-94
TRUCK MOTOR	32-95
TRUCK MOTOR	32-96
TRUCK MOTOR	32-97
TRUCK MOTOR	32-98
TRUCK MOTOR	32-99
TRUCK MOTOR	32-100

B L A n k
 B L A n k
 B L A n k
 B L A n k

TRUCK MOTOR	32-101
TRUCK MOTOR	32-102
TRUCK MOTOR	32-103
TRUCK MOTOR	32-104
TRUCK MOTOR	32-105
TRUCK MOTOR	32-106
TRUCK MOTOR	32-107
TRUCK MOTOR	32-108
TRUCK MOTOR	32-109
TRUCK MOTOR	32-110
TRUCK MOTOR	32-111
TRUCK MOTOR	32-112
TRUCK MOTOR	32-113
TRUCK MOTOR	32-114
TRUCK MOTOR	32-115
TRUCK MOTOR	32-116
TRUCK MOTOR	32-117
TRUCK MOTOR	32-118
TRUCK MOTOR	32-119
TRUCK MOTOR	32-120
TRUCK MOTOR	32-121
TRUCK MOTOR	32-122
TRUCK MOTOR	32-123
TRUCK MOTOR	32-124
TRUCK MOTOR	32-125
TRUCK MOTOR	32-126
TRUCK MOTOR	32-127
TRUCK MOTOR	32-128
TRUCK MOTOR	32-129
TRUCK MOTOR	32-130
TRUCK MOTOR	32-131
TRUCK MOTOR	32-132
TRUCK MOTOR	32-133
TRUCK MOTOR	32-134
TRUCK MOTOR	32-135
TRUCK MOTOR	32-136
TRUCK MOTOR	32-137
TRUCK MOTOR	32-138
TRUCK MOTOR	32-139
TRUCK MOTOR	32-140
TRUCK MOTOR	32-141
TRUCK MOTOR	32-142
TRUCK MOTOR	32-143
TRUCK MOTOR	32-144
TRUCK MOTOR	32-145
TRUCK MOTOR	32-146
TRUCK MOTOR	32-147
TRUCK MOTOR	32-148
TRUCK MOTOR	32-149
TRUCK MOTOR	32-150
TRUCK MOTOR	32-151
TRUCK MOTOR	32-152
TRUCK MOTOR	32-153
TRUCK MOTOR	32-154
TRUCK MOTOR	32-155
TRUCK MOTOR	32-156
TRUCK MOTOR	32-157
TRUCK MOTOR	32-158
TRUCK MOTOR	32-159
TRUCK MOTOR	32-160
TRUCK MOTOR	32-161
TRUCK MOTOR	32-162
TRUCK MOTOR	32-163
TRUCK MOTOR	32-164
TRUCK MOTOR	32-165
TRUCK MOTOR	32-166
TRUCK MOTOR	32-167
TRUCK MOTOR	32-168
TRUCK MOTOR	32-169
TRUCK MOTOR	32-170
TRUCK MOTOR	32-171
TRUCK MOTOR	32-172
TRUCK MOTOR	32-173
TRUCK MOTOR	32-174
TRUCK MOTOR	32-175
TRUCK MOTOR	32-176
TRUCK MOTOR	32-177
TRUCK MOTOR	32-178
TRUCK MOTOR	32-179
TRUCK MOTOR	32-180
TRUCK MOTOR	32-181
TRUCK MOTOR	32-182
TRUCK MOTOR	32-183
TRUCK MOTOR	32-184
TRUCK MOTOR	32-185
TRUCK MOTOR	32-186
TRUCK MOTOR	32-187
TRUCK MOTOR	32-188
TRUCK MOTOR	32-189
TRUCK MOTOR	32-190
TRUCK MOTOR	32-191
TRUCK MOTOR	32-192
TRUCK MOTOR	32-193
TRUCK MOTOR	32-194
TRUCK MOTOR	32-195
TRUCK MOTOR	32-196
TRUCK MOTOR	32-197
TRUCK MOTOR	32-198
TRUCK MOTOR	32-199
TRUCK MOTOR	32-200